



1400 V QUICK REFERENCE GUIDE

The quick reference guide is not a substitute for the Operators Manual!
Please refer to Operators Manual for more detailed information

TRACTOR CONNECTION

1. Hydraulics

Red pipe > Supply (35-40lpm)

Blue pipe > Return (**Free flow return!!**)




2. Electrics

A. Connect 12V supply to 3pin plug

B. Connect wrapper harness to controller

C. Connect hand remote to controller

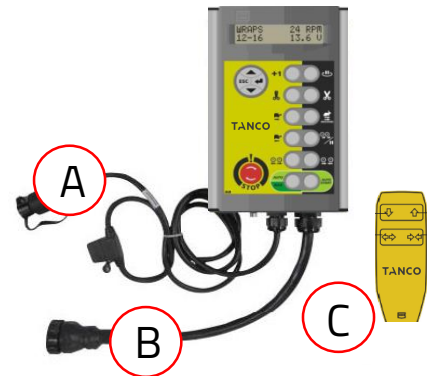

ENTERING THE WORKING POSITION



1. Switch on controller using the red switch

2. Enter the **Auto Park Sequence**

A. Press the Down arrow to get to the Auto Park Sequence

B. Press Enter

C. Press and hold the **Unfold drawbar** button until **End** is displayed.

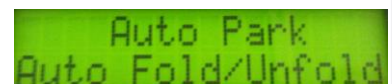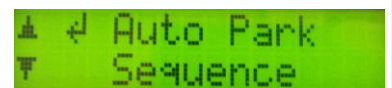

The 1400V wrapper will now be in the working position

3. Install the 2 rolls of film

4. Set the Auto Load paddle into the working position (if using Auto Load).





OPERATION

Auto mode (A) Auto load + Auto wrap + Auto offload

1. Drive into the bale until the Auto load paddle contacts the bale.
2. The bale will then be loaded, wrapped, and unloaded Automatically.



Auto mode (A) Auto wrap + Auto offload

1. Drive into the bale.
2. Press the "Load up" button on the remote (a) or on the controller (b) to load the bale.
3. The bale will be wrapped and offloaded Automatically.



a



b



Auto mode (A) Auto offload

1. Drive into the bale.
2. Press the "Load up" button on the remote (a) or on the controller (b) to load the bale.
3. Press "Auto start" on the remote (c) or controller (d) to begin wrapping.

a



b



c



d



Auto mode (A)

1. Drive into the bale.
2. Press the "Load up" button on the remote (a) or on the controller (b) to load the bale.
3. Press "Auto start" on the remote (c) or controller (d) to begin wrapping.
4. Press "Offload" on the remote (e) or on the controller (f) to offload the bale.

a



b




c



d



e

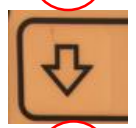



f





ENTERING THE TRANSPORT POSITION

1. Remove the 2 rolls of film and place them on the film roll holders. **IMPORTANT!!**
2. Enter the "Auto Park Sequence"
 - A. Press the down arrow to get to "Auto Park Sequence"
 - B. Press Enter
 - C. Press and hold the "Fold Drawbar" button until "End" is displayed.

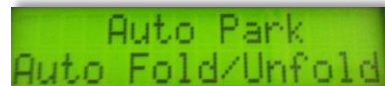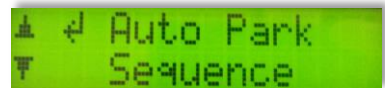

The 1400V wrapper will now be in the transport position.

SETTING NO. OF WRAPS

This is a guideline only! Misshapen bales may require more wraps to achieve full coverage.

Bale Diameter	4 layres	6 layres	8 layres
120 cm	16 wraps	24 wraps	32 wraps
150 cm	20 wraps	30 wraps	40 wraps

HAND REMOTE OPERATION

Manual Mode (M):

Table down

Auto Mode (A): Start autounloading

Manual Mode (M):

Loadarm out

Auto Mode (A): Start autowrap



Manual Mode (M):

Table up

Auto Mode (A): Start autoloading


Manual Mode: Loadarm in



EXPERT CONTROLLER OPERATION

4-way Menu switch

- Set no. of wraps
- Change/Reset bale sub-total
- Access Operator setup menu
- Access Technician setup menu

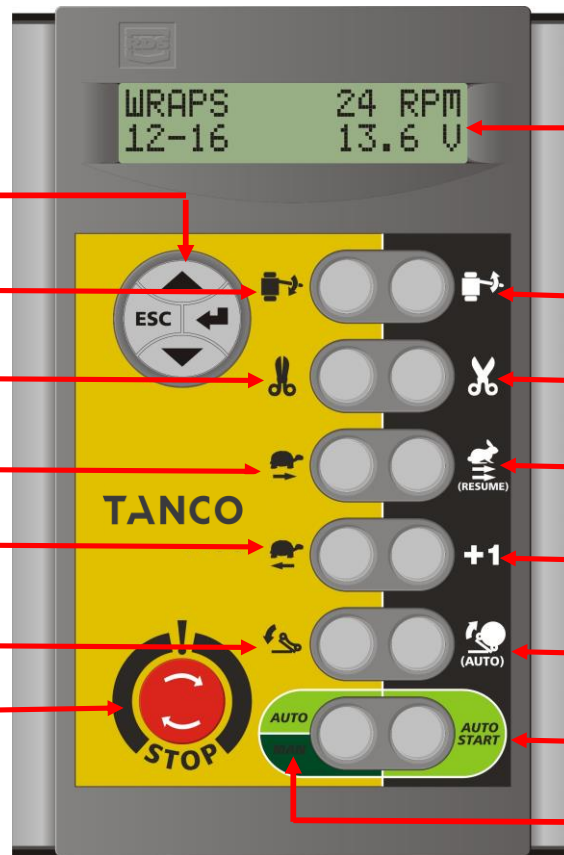

Display in normal working mode:

- Current No. of wraps
- Target No. of wraps
- Wrapping speed
- Bale Total (10 separate stores)
- Grand Total No. of Bales
- Mode: M (Manual) / A (Auto)

L1 – Fold drawbar position

L2 – Close C&S

L3 – Slow wrap forward

L4 – Slow reverse arm

L5 – Load Bale

Power On/Off / Emergency Stop

R1 Unfold drawbar position

R2 – Open C&S

R3 – Fast wrap forward / Resume autowrap (after pause / emergency stop)

R4 – Add an extra wrap during wrapping cycle

R5 – Unload bale

R6 – Start Automatic Wrapping Cycle

L6 – Select Operating Mode: „M” or „A”

OPTIONAL RF REMOTE OPERATION

The RF (Radio Frequency) remote is required if you wish to operate the 1400V wrapper statically

RF Receiver



Load bale / add extra wrap

Rotate wrap arms forward

Open Cut & Start


Auto Start wrap

Offload the bale

Emergency Stop

Rotate wrap arms in reverse

Close Cut & Start

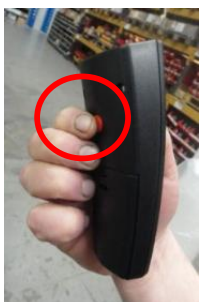

The red button on the rear of the remote must be pressed while pressing any other button (except "STOP").

