



# S200V / S300V QUICK REFERENCE GUIDE

The quick reference guide is not a substitute for the Operators Manual!  
Please refer to Operators Manual for more detailed information

## TRACTOR CONNECTION

### 1. Hydraulics

Red pipe > Supply (35-40lpm)


Blue pipe > Return (**Free flow return!!**)



### 2. Electrics


A. Connect 12V supply to 3pin plug

B. Connect wrapper harness to controller

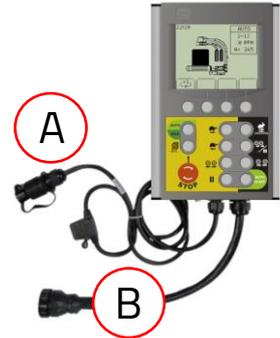


## ENTERING THE WORKING POSITION


1. Remove the wrap arm transport lock.

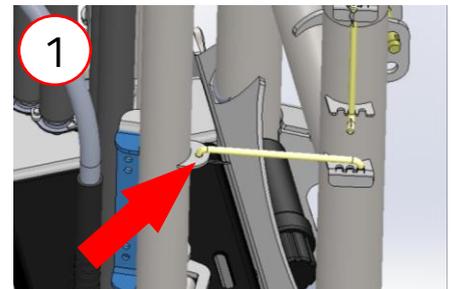


2. Position the safety arms into the working position by removing the retaining pin.

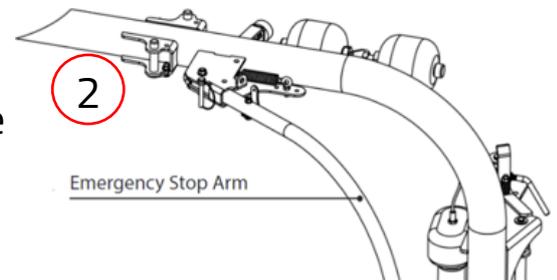

3. Adjust the load arm stop pin to allow clearance between the top of the bale at the rotating arm.

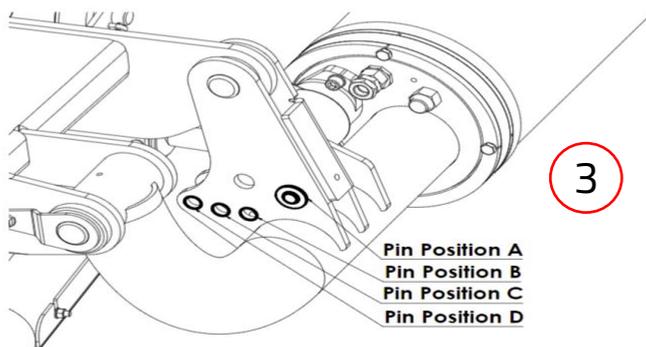

4. Unfold the wrap arms and install the 2/3 rolls of film.

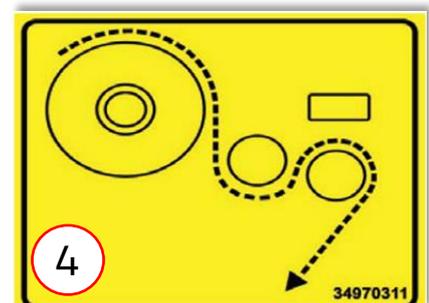



## OPERATION

### Auto mode (A) Auto load + Auto wrap

1. Drive into the bale until the End Tip roller contacts the bale.
2. The bale will then begin loading automatically.
3. Once loading is complete, the wrapping process will begin automatically.
4. Once wrapping is complete, press the **"Rollers out"** button to offload the bale.



### Auto mode (A)

Auto mode can be used with some of the Auto features switched off. These are: Auto load, Auto wrap, Auto unload. This can be done in the Operator Menu. This allows the operator to decide when they would like each step to begin. The below instructions explain how to carry out each Auto step individually.

1. Drive into the bale.
2. Press the **"Rollers in"** button (a) to load the bale.
3. Once the bale is loaded, press **"Auto Start"** (b). Wrapping will then begin.
4. Press the **"Rollers out"** button (c) to offload the bale.



### Using the End Tip

Note: End Tip must be set to 'ON' in the Operator Settings.

1. Press the **"Rollers out"** button (a). The End Tip will first extend, before the rollers move out to unload the bale.





# EXPERT PLUS CONTROLLER OPERATION

22:28

AUTO  
2-12  
Ø RPM  
A= 265

- Current No. of wraps
- Target No. of wraps
- Wrapping speed (RPM)
- Bale total
- Grand total No. of bales
- Mode: Manual / Auto

Close cutter

Open cutter (add extra wrap in Auto)

Select Auto or Manual

Slow wrap

Menu

Reverse wrap arm

Rollers out

Power on/off / Emergency Stop

Arm fold (Seq. Reset in Auto)

Arm unfold (Clear warning)

Fast wrap / Resume wrapping

Rolls rotate (Pause bale rotation in Auto)

Rollers in

Auto start wrap cycle

Pause wrapping in Auto

# OPTIONAL RF REMOTE OPERATION

The RF (Radio Frequency) remote is required if you wish to operate the S200V / S300V statically.



The red button on the rear of the remote must be pressed while pressing any other button (except "STOP").

- Load bale / add extra wrap
- Rotate wrap arms forward
- Open Cut & Start
- Auto Start wrap
- Offload the bale
- Emergency Stop
- Rotate wrap arms in reverse
- Close Cut & Start



## OPTIONAL HANDHELD REMOTE

The operator can activate the main wrapper functions through the handheld remote. This means that the operator can hold the remote in their hand while operating the tractor.



**Manual**  
Reverse rotate  
**Auto mode**  
Auto start wrap



**Manual**  
Slow rotate forward  
**Auto mode**  
Auto start wrap

Rollers out

Rollers in

## ENTERING THE TRANSPORT POSITION

1. Fully close the loading rollers.
2. Ensure the wrap arms are in the folded position.
3. Rotate the folded wrap arms until they are behind the Cut & Start.
4. Insert the wrap arm transport lock.
5. Lock the outer safety arm into the transport position.

